


# NeuraLaserColor II Accessories – Paper Stacker Setup

Remove stacker parts from the printer accessory box.

- Fang & Chain Bar
- Basket

1

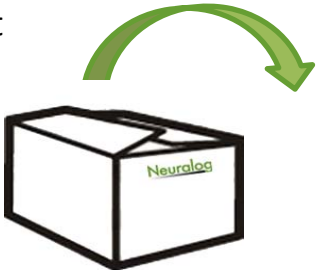


With printer **OFF**, remove the stacker lid lifting up LEFT side and sliding out of slots.

2



Attach Fang & Chain bar sliding RIGHT side into base slot and then lowering LEFT side.

3

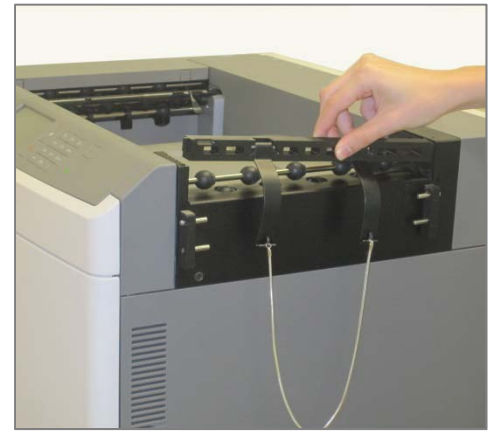


Replace lid sliding RIGHT side into two slots and then lowering LEFT side.

4



Attach Basket by sliding hooks over the UPPER pins.

5

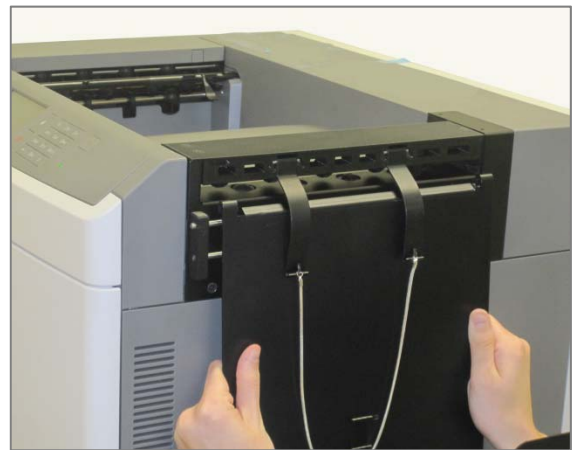

6

Basket should hang on upper pins and rest against the exit side of the printer.

